

# Setting Up and Using Your Tablet Computer with a Wireless Projector

---

## Changing the Resolution of Your Screen

***This only needs to be done ONCE and must be done PRIOR to using the projector.***

- Right click on your desktop and select PERSONALIZE > DISPLAY SETTINGS
- Slide the resolution to the center, which is 1024 by 768 pixels.
- Click APPLY and OK.

## Rotating the Tablet Display

- Turn the screen clockwise with your hand and lock it flat on to the keyboard.
- The display SHOULD rotate automatically from landscape to portrait display.
- IF the display DOES NOT rotate or you would like to change the direction of the display, you can rotate it manually by using the shortcuts on the screen:
  - o Old Black Tablets: On the top of the screen, just outside of the display is the rotate symbol (a circle of two arrows). Tap the symbol with your tablet pen to rotate the display.
  - o New Silver Tablets: On the side of the screen, there is a SMALL hole with the rotate symbol (a circle of two arrows). Use your tablet pen to press the button inside of the hole to manually rotate the display.

## Connecting the Wireless Projector and the Tablet Computer

- Plug in cart and turn on the wireless projector. A blue screen will display on the projector.  
***Please wait for the projector to finish authenticating before moving on.***
- Open the EMP NS CONNECTION program on your desktop.
- Click on the projector that appears in the list and click connect.
- Type in the keyword that appears on the bottom left corner of the projector screen (it is a 4 digit number) and click OK.
- Your projector will automatically connect and you should see your computer display on the projector screen.
- When finished using the projector, click the power button TWICE to power down the projector.  
**PLEASE POWER DOWN THE PROJECTOR WHEN NOT IN USE!**

## Viewing DVDs Using the Tablet and Projector

- DVDs CAN NOT be shown using the wireless connection to the projector.
- Close the Epson software that is currently connecting your computer to the projector wirelessly.
- To show a DVD, connect the VGA cord (computer to projector) and speakers (plug in power cord and sound cord through headphone jack). Cords are located in the projector bag in the bottom of the cart.
- You will need to hit the SOURCE SEARCH button on the projector to find the connection from the projector to the computer.

## Streaming Video from the Internet Using the Projector

- If you are trying to stream video from the Internet using your tablet and the projector while it is connected wirelessly, there will be a delay and your video may appear choppy.
- You will need to hardwire your projector by connecting the VGA cord from the computer to the projector.